

ProSteering®

Core Guidelines

The following Core Guidelines apply to cores returned for credit and purchased cores

1. The input shaft must rotate freely (3 turns) and the output shaft rotates with the input shaft.
2. Serrations on input and output shaft are not damaged, cracked, or twisted.
3. No visible damage or cracks noticeable in the outer housing, gear must be fully assembled.
4. Port plugs installed with threaded plastic or metal plugs to protect condition of internal components.
5. All brackets, U-joints, couplings, and pitman arm are removed.
6. Core credit is given on a same gearbox exchange basis.

ISO9001:2008

Issued: 1/23/14